NETAGENT MINI SNMP





Contents

Chapte	er1. Introduction	3
1.	1 Features	3
1	2 Applications	4
1	3 Specifications	5
Chapte	er2. Functional Description	6
Se	ection1. Web page user interface	6
	■ Information > UPS Status	6
	■ Information > System Status	6
	■ Information > Remote Control	8
	■ Configuration > UPS Configuration	9
	■ Configuration > UPS On/Off Schedule	10
	■ Configuration > Network	12
	■ Configuration > SNMP	13
	■ Configuration > Notification	14
	■ Configuration > Web/Telnet/FTP	15
	■ Configuration > System	16
	■ Log Information	17
	■ Management > File Manager	18
	■ Management > Serial Port Debug	19
	■ Management > About	20
Se	ection2. Free software	21
	2.1 Netility	21
	2.2 SNMPView	22
	2.3 SMS server	22
	2.4 ClientMate	23

Chapter 1. Introduction

1.1 Features

DS801 is the SNMP (Simple Network Management Protocol) card for monitoring UPS. It could remote control the UPS and get the current status of the UPS.

DS801 is for "RS232" interface UPS and the communication protocol includes MegaTec, and Megatec Three Phase. DS801 provides a simple and easy installation procedure. CD provides along with DS801 offers several software to allow the user to configure IP address, central monitoring and multi shutdown on different operating systems. Other advance configurations could be accomplished in the Web browser.

Features:

- 1) Provide SNMP MIB to monitor & control UPS.
- 2) Auto-sense 10M/100M Fast Ethernet, manage and configure via Telnet, Web Browser or NMS.
- 3) Support TCP/IP, UDP, SNMP, Telnet, SSH, SNTP, PPP, HTTP, HTTPS, SMTP, FTP, FTPS Protocols.
- 4) Providing easy setup and upgrade tools via our Netility software.
- 5) Send SNMP TRAP, e-mail and SMS for events notification.
- 6) Auto email daily UPS history report.
- 7) Perform graceful shutdown with our ClientMate software.

1.2 Applications

■ DS801 allows UPS to be monitor on network.


When the UPS connects with DS801, the system manager could check each UPS condition by a computer with Browser installed. The manager could monitor and control the UPS by simply input the IP address of the DS801, which connects to the UPS. When there is a power abnormal condition happens, the DS801 could also send the trap information to the system manager to take proper action.

■ DS801 Provides Shutdown Utilities.

When a computer install our shutdown software in the network that connects to the DS801, when UPS is in AC failure condition or Battery Low condition, the software would close all the files of the operating system and shutdown gracefully. This could avoid system corrupt when a power disconnection happened.

1.3 Specifications

CPU	ARM 300MHz 32bit		
System Clock	300MHz		
Flash Memory	128M Byte		
SD RAM	64M Byte		
LED	6		
Watch Dog	YES		
Real Time Clock	NO		
LAN Interface	10M / 100M UTP		
Ethernet Throughput	1620KB per seconds		
Ethernet Latency	0.759 milliseconds		
EMI			
FCC Class B, CE			
Dimension	81.06mm(L) × 51.76mm(W) × 25.8mm(H)		
Weight	28g±2g		

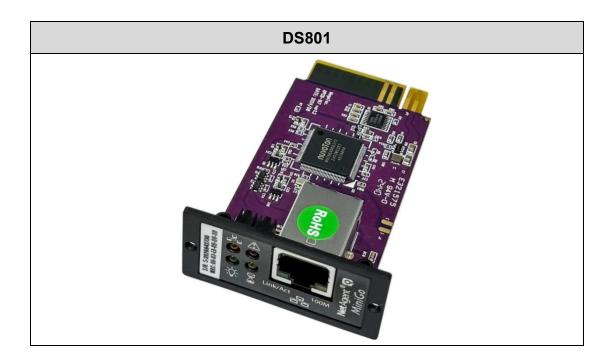

Chapter 2. Functional Description

Section1. Web page user interface

■ Information > UPS Status


This page is to show the current UPS connection status in graphic mode with Voltage, Frequency and other information.



■ Information > System Status


> System Information

Here shows all the basic information of the DS801 such as hardware / firmware version, Serial Number, Uptime...etc.

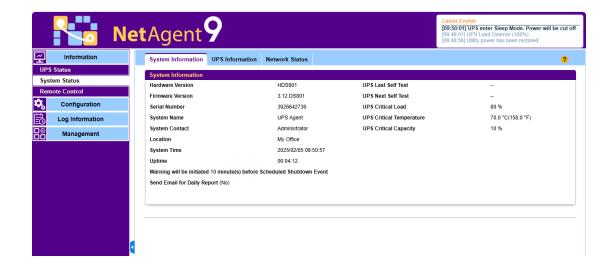


> UPS Information

This page shows UPS information/Battery Information/Rating Information. The data is obtained from the reply of UPS or the settings from [UPS Configuration] web page.

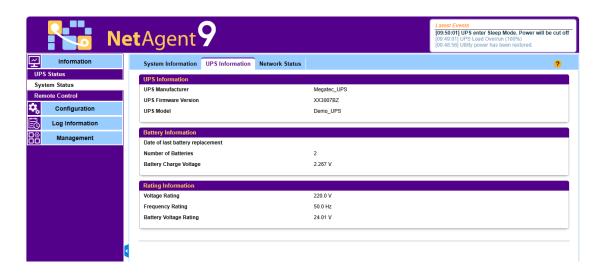


■ Information > Remote Control


This page allows user through the network to remotely control UPS. (Note: Different UPS protocol, allowing operations may be different.)

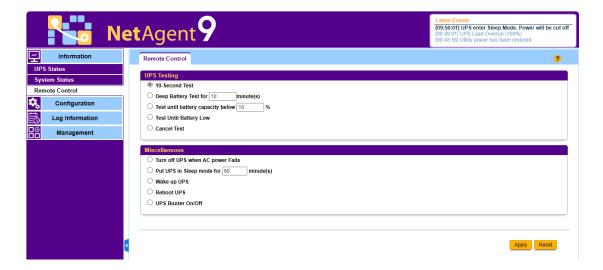


■ Configuration > UPS Configuration

This page is to set some general settings of UPS, test UPS setting and alarm value setting etc.

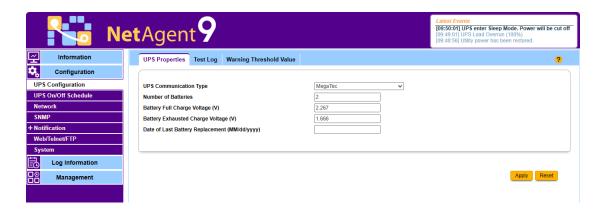


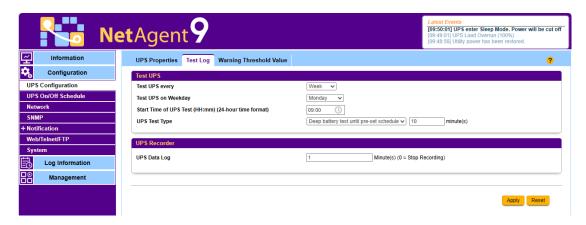


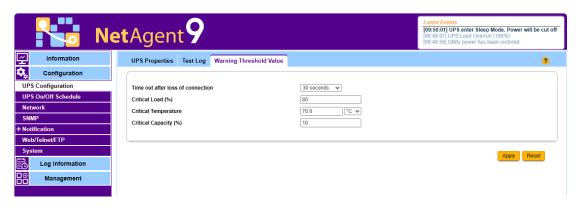


Configuration > UPS On/Off Schedule

This page is to set UPS ON/OFF, Weekly and Date schedule.

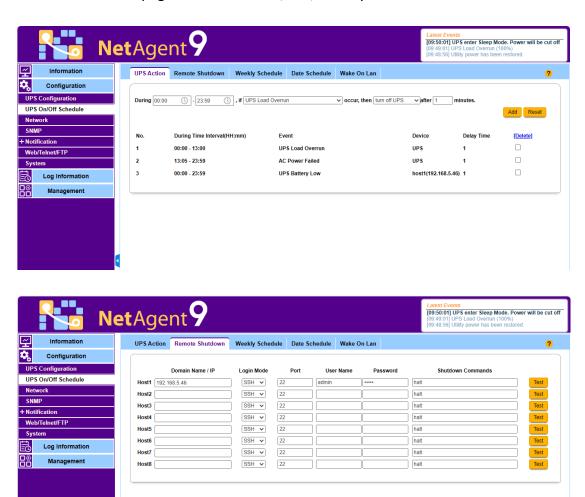


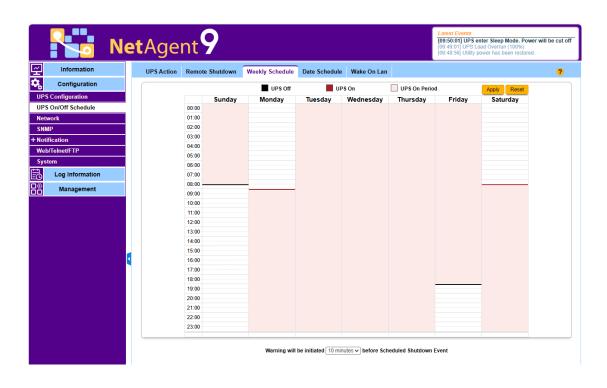

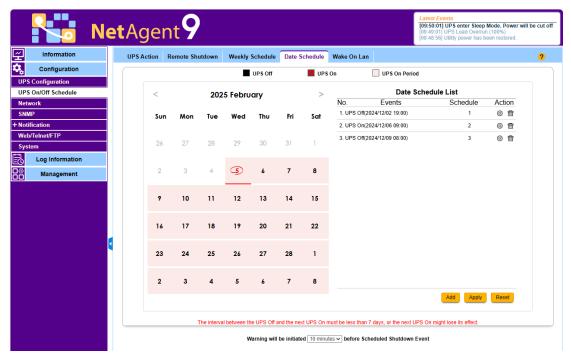

Configuration > Network

This page is to set DS801 network settings. Support IPv4, DDNS and PPPoE.

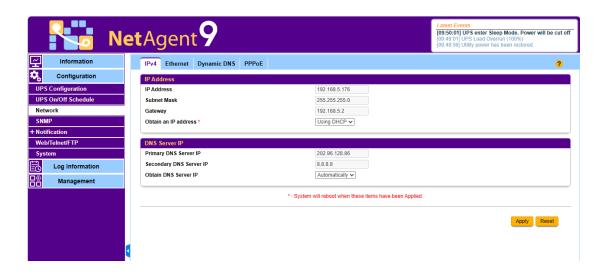







Configuration > SNMP

This page is to set DS801 SNMP settings. Support SNMP v1, v2c and v3; TRAP support SNMPv1 Trap, SNMPv2 Trap, SNMPv2 Inform, SNMPv3 Trap, SNMPv3 Inform.

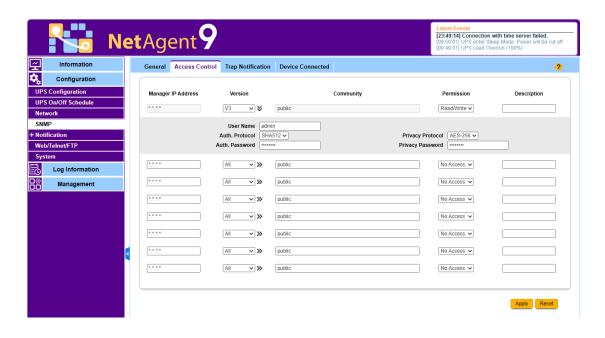


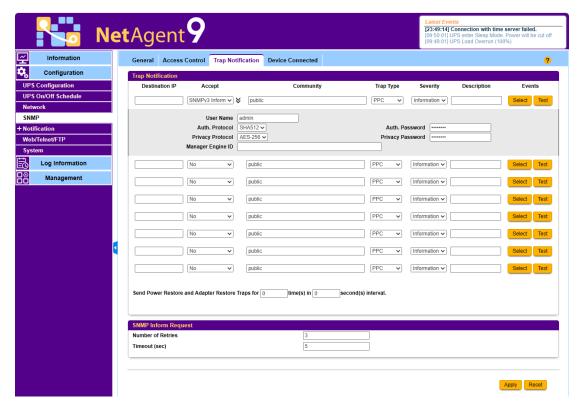

■ Configuration > Notification

Log Information

This page is to set DS801 Email settings and SMS settings.

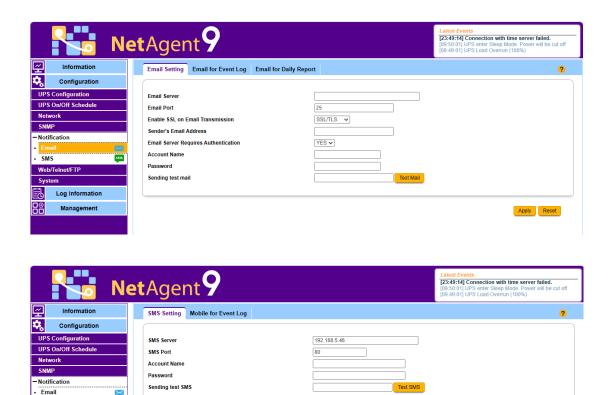



Apply Reset

Configuration > Web/Telnet/FTP

To set permission for each user account for Web, Telnet and FTP access with up to eight users. Also to enable/disable specific port for HTTP/HTTPS, Telnet/ SSH and FTP/FTPS.


In addition, RADIUS server related settings could be also set here.

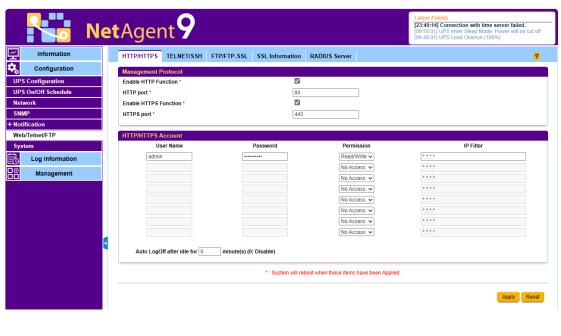


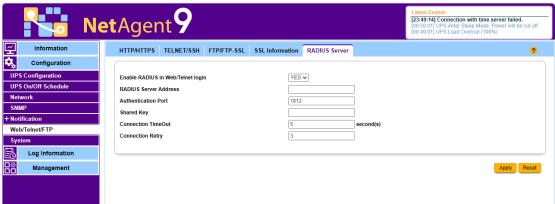


Configuration > System

This page is to set DS801 system time, language and configuration.

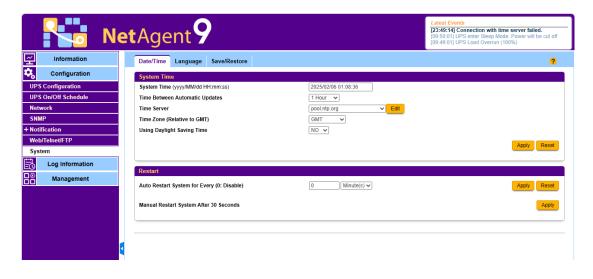

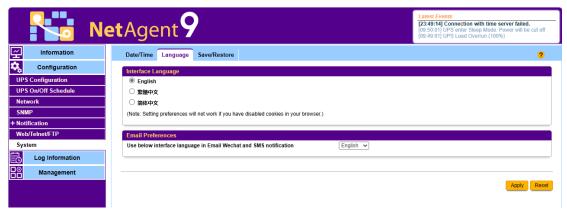


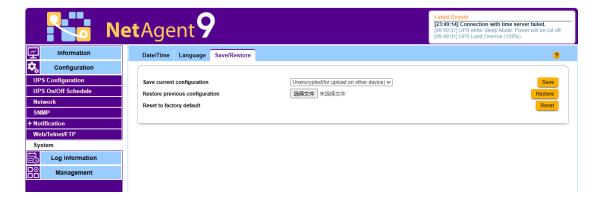


Log Information

This includes Event Log, Data Log, and Battery Test Log.


Log can be saved as files on the computer.

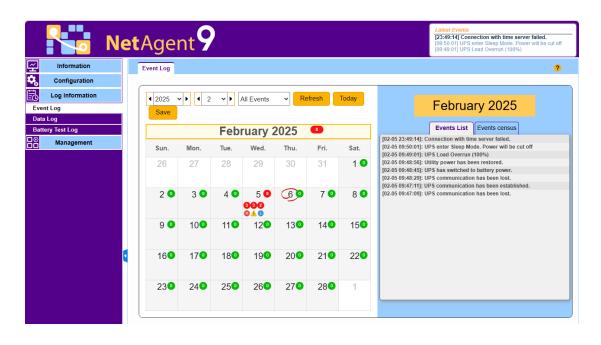

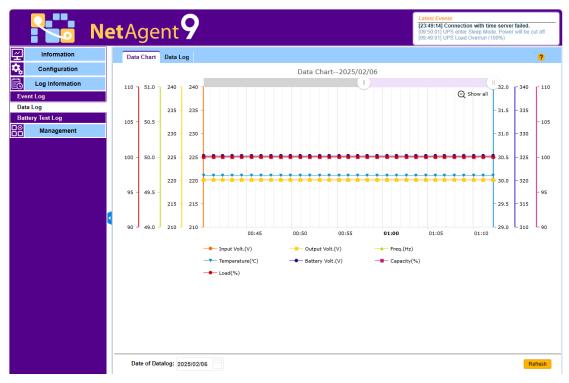


■ Management > File Manager

This is manage log file generates by DS801. Specific log.dat can be download, delete. Once dat. file is deleted, the log record will also be erased on the Log display under Log Information.

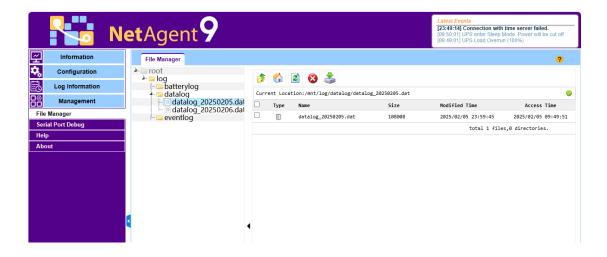


Management > Serial Port Debug


It shows the communication status between DS801 and UPS by Sent and Received columns.

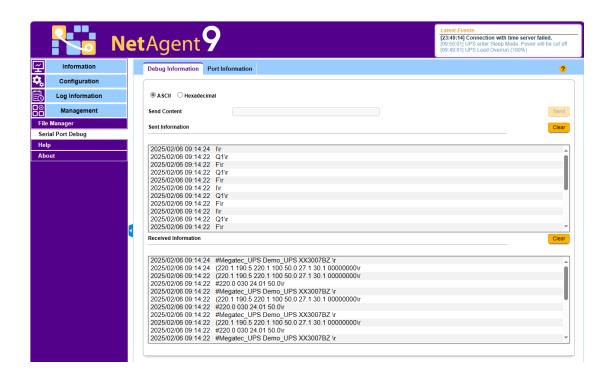

■ Management > About

It shows DS801 hardware/firmware version and serial number, and DS801 firmware can also be upgraded via FTP or Web here.

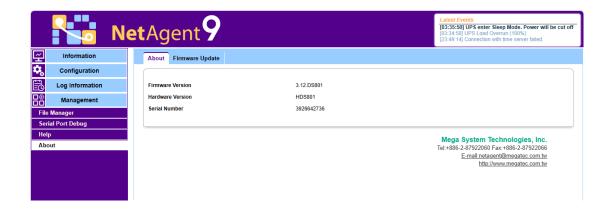


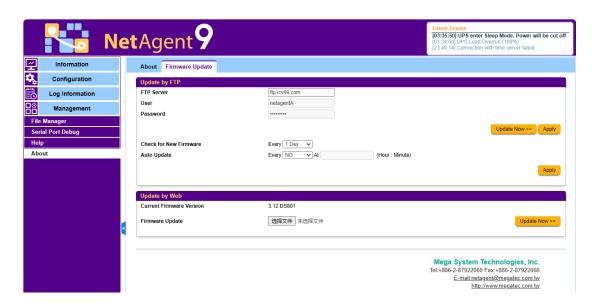

Section 2. Free software

2.1 Netility

The software is necessary software to install DS801. Netility can set up the DS801 IP address and other network settings.

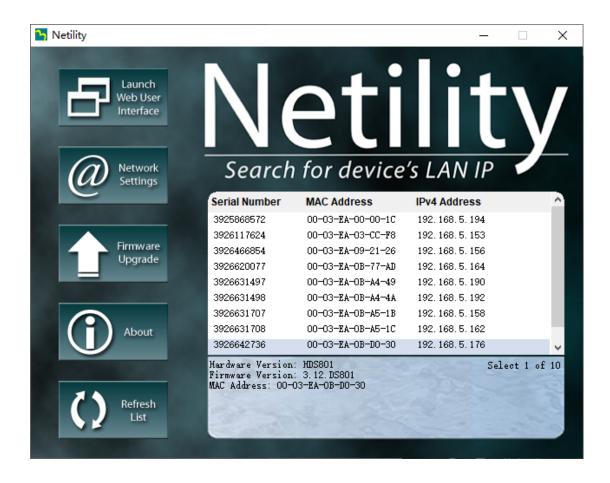

2.2 SNMPView

The software is centralized monitoring software. The software can send SMS event notification and alarm (required GSM Modem), email alarm and sound alarm etc.



2.3 SMS server

The software is used for Windows. Connect GSM Modem to PC, after the completion of settings; a SMS server platform is finished. DS801 can send SMS event notification and alarm by SMS server.

2.4 ClientMate

The software is used for Windows, Linux and MAC. When ClientMate get the power failure signal (AC Fail, Battery Low, Schedule Shutdown) from the DS801, ClientMate will save the files and shutdown the system gracefully.

